

Installation Instructions / Notice de montage



WARNING
ELECTRICAL SHOCK HAZARD

AVERTISSEMENT
RISQUE D'ÉLECTROCUTION

READ and UNDERSTAND these instructions before installing luminaire.

LISEZ cette notice et assurez-vous de la COMPRENDRE avant de monter le luminaire.

EN

Disconnect the Electrical supply power at the services panel (fuse or circuit breaker box). Failure to do so could result in serious injury. Only qualified electricians should install this luminaire and the installation **MUST** conform to the Canadian Electrical Code Part I and any local codes and ordinances. Make sure you have the proper tools and materials to complete the installation before attempting to install the luminaire. For CANADA ONLY installations on 208, 240, 480 or 600 volt line-to-line supply voltages require the use of ISOLATED SECONDARY type ballasts ONLY. Auto-transformer type ballasts must not be used. If replacement of the ballast is required, install the same type ballast as was originally installed. Failure to do so could result in serious injury from shock. This luminaire, when equipped with a quad volt autotransformer ballast (120/208/240/277), must not be installed on line to line electrical distribution systems.

FR

Couper l'alimentation du courant électrique au panneau de service (boîte de fusibles ou disjoncteurs), sans quoi il pourrait en résulter des blessures sérieuses. Seuls des électriciens qualifiés devraient installer ce luminaire et l'installation **DOIT** être conforme au Code canadien de l'électricité, Première partie, ainsi qu'aux codes et règlements locaux. Assurez-vous d'avoir les outils et le matériel nécessaires à l'installation avant d'essayer d'installer le luminaire. Pour CANADA seulement - les installations sur 208, 240, 480 ou 600 V sur des tensions phase à phase nécessitent l'utilisation de ballasts avec SECONDAIRE ISOLÉ seulement. Dans ces cas, ne pas utiliser de ballasts de type autotransformateur. Si le remplacement du ballast est nécessaire, installer le même type de ballast que celui installé par Stanpro, sans quoi il pourrait en résulter des blessures sérieuses par électrocution. Ce luminaire, lorsque muni d'un ballast autotransformateur à quatre tensions (120/208/240/277), ne doit pas être installé sur les systèmes de distribution électrique phase à phase.

CEILING INSTALLATION ONLY

1. Disconnect all power to the wiring intended to be connected to the luminaire.
2. Observe all WARNINGS and CAUTIONS on all labels and markings during installation.
3. Install the mounting plate on the ceiling over the junction box (screws not provided).
4. Unit is equipped with a "TWIST & LOCK" mounting system to ensure an easy and safe mounting procedure. Hang the fixture onto the "T" bracket. To ensure the "T" bracket will fit in the corresponding hole on the top of the unit tilt the fixture to a 45° angle prior pushing upwards (Fig. 1).
5. With the unit safely hanged onto the "T" bracket, make the connections to the power supply, observing polarity and luminaire's nameplate rating.
6. Push the unit upwards until all brackets ("T" and "L") are in the corresponding holes and the fixture is flushed with the mounting backplate then twist the unit counterclockwise until it locks securely onto the backplate.
7. Remove the lens and install the lamp in the fixture. (Fig. 2)
8. Re-attach the lens.
9. Power the fixture.

RELAMP

1. Before lamp replacement, shut power off and allow lamp and fixture to cool to avoid electrical shock and potential burn hazards.
2. Any HID lamp should be replaced as soon as possible after failure. Failure to promptly replace cycling lamps may damage the fixture or components. For High Pressure Sodium and Pulse Start Metal Halide lamps, lamps **MUST** be replaced promptly. These lamps will begin to cycle (turn on and off repeatedly) near end of life. Failure to replace these lamps can lead to premature ballast and components failure, and potential non-passive failure of the lamp.
3. Check that the LAMP WATTAGE and TYPE agree with the luminaire's nameplate rating. Detach the lens Fig. 2; remove the old lamp; insert the new lamp and tighten firmly into the socket. Re-attach the lens.

**NOTE : LUMINAIRE'S STYLE AND BALLAST TYPE
WILL VARY WITH LUMINAIRE OPTIONS.**
**NOTE : LA CONFIGURATION DU LUMINAIRE ET LE TYPE
DE BALLAST DEPEND DES OPTIONS DU LUMINAIRE**

Fig. 1

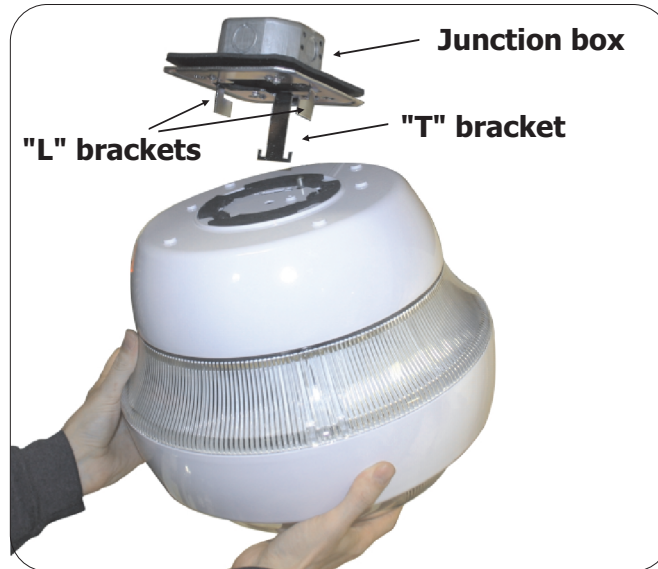


Fig. 2

