



WARNING
ELECTRICAL SHOCK HAZARD

AVERTISSEMENT
RISQUE D'ÉLECTROCUTION

READ and UNDERSTAND these instructions before installing luminaire.

LISEZ cette notice et assurez-vous de la **COMPRENDRE** avant de monter le luminaire.

EN

Only qualified electricians should install this luminaire and the installation **MUST** conform to the Canadian Electrical Code Part I, NEC and any local codes and ordinances. Make sure you have the proper tools and materials to complete the installation before attempting to install the Flexible LED strip.

INSTALLATION

1. To adjust or subdivide the length of a COB LED tape, cut it together with the sleeve as shown in Fig. 1.
2. Remove the protection layer on the back of the COB LED tape. Paste the COB LED tape on desired surface.
3. Connect the DC coaxial connector as shown in Fig. 2 step "a".
4. Connect the AC cable connector to the driver as shown in Fig. 2 step "b".

NOTE: If connection between two LED tapes is required, install with the use of the connectors as Fig. 3 and 4:

- Open the connector cover as shown in Fig. 3, step "a".
 - Insert LED tapes into connectors as shown in Fig. 3, step "b".
 - Pliers are required to secure and close the tab connectors with the DC leads by pressing the covers connectors (Fig. 3, step "c" and step "d").
5. Plug the AC cable to the power supply as shown in Fig. 2, step "c".
 6. Select the AC switch ON as shown in Fig. 2, step "d".

FR

Seuls des électriciens qualifiés devraient installer ce luminaire et l'installation doit être conforme au Code Canadien de l'Électricité Première Partie, NEC ainsi qu'aux codes et règlements locaux. Assurez-vous d'avoir les outils et le matériel nécessaires à l'installation avant d'essayer d'installer la bande DEL flexible.

INSTALLATION

1. Pour ajuster ou découper la longueur d'un ruban LED COB, coupez-le avec la gaine comme indiqué sur la figure 1.
2. Retirez la pellicule de protection au dos du ruban LED COB. Collez le ruban LED COB sur la surface souhaitée.
3. Branchez le connecteur coaxial CC comme indiqué à l'étape « a » de la figure 2.
4. Connectez le connecteur du câble CA au driver comme indiqué à la figure 2, étape « b ».

NOTE : Si vous devez raccorder deux bandes LED entre elles, procédez à l'installation à l'aide des connecteurs, comme indiqué sur les figures 3 et 4 :

- Ouvrez le couvercle du connecteur comme indiqué à la figure 3, étape « a ».
 - Insérez les bandes DEL dans les connecteurs comme indiqué à la figure 3, étape « b ».
 - Une pince est nécessaire pour fixer et fermer les connecteurs à languette avec les fils CC en appuyant sur les couvercles des connecteurs (Fig. 3, étape « c » et étape « d »).
5. Branchez le câble CA à l'alimentation électrique comme indiqué à la Fig. 2, étape « c ».
 6. Mettez l'interrupteur CA sur ON comme indiqué à la Fig. 2, étape « d ».

Fig. 1

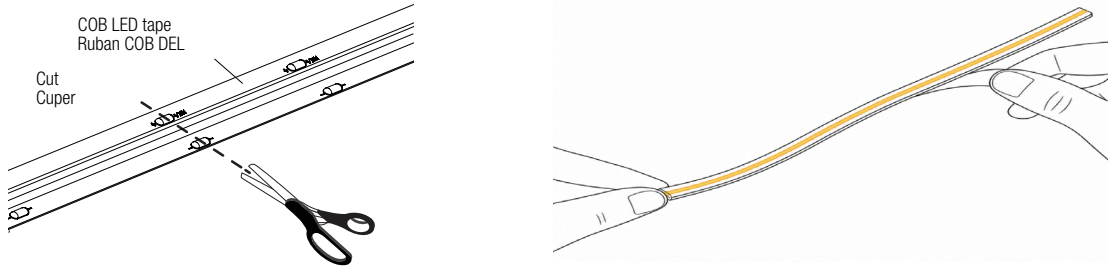


Fig. 2



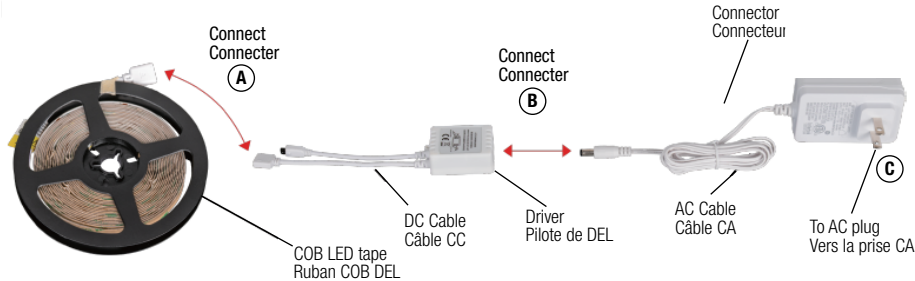



Fig. 3

Fig. 4

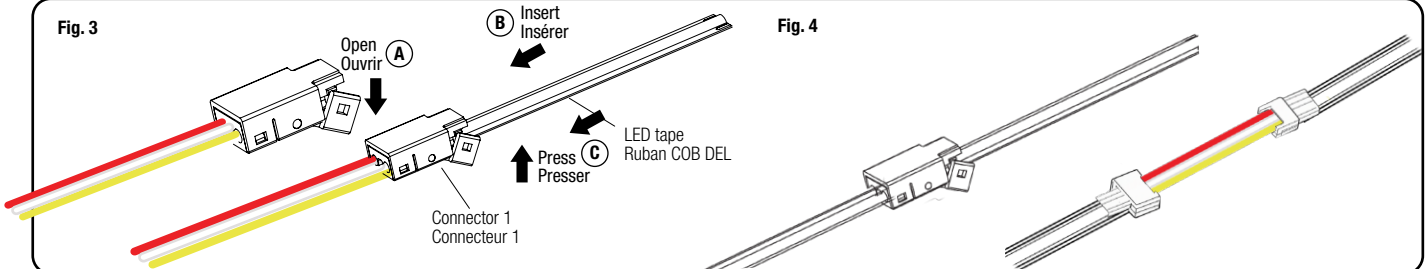

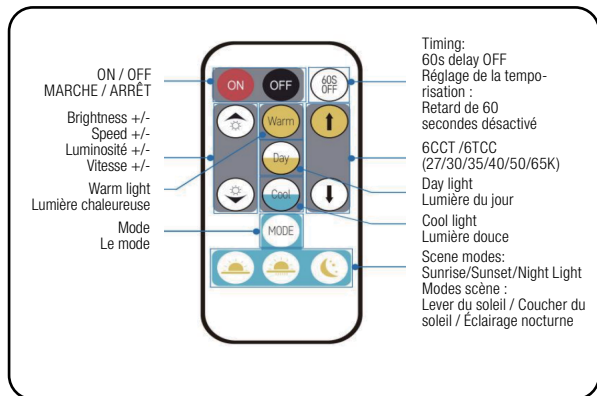

COB KIT INCLUDES / LE KIT COB COMPREND :

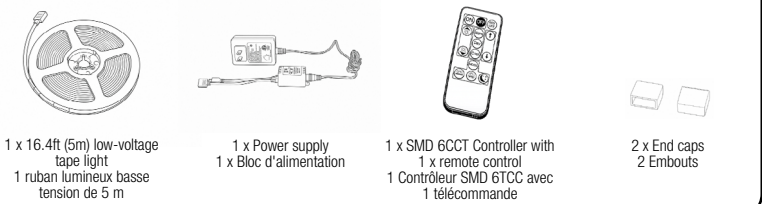

NOTE: IMAGES MAY NOT REFLECT YOUR EXACT MODEL AND ARE FOR REFERENCE PURPOSES ONLY.
NOTE: LES IMAGES SONT FOURNIES À TITRE INDICATIF SEULEMENT ET PEUVENT NE PAS REPRÉSENTER VOTRE MODÈLE EXACT.