


Special instruction

Instruction for replacement VP geartrays with ODIM sensor

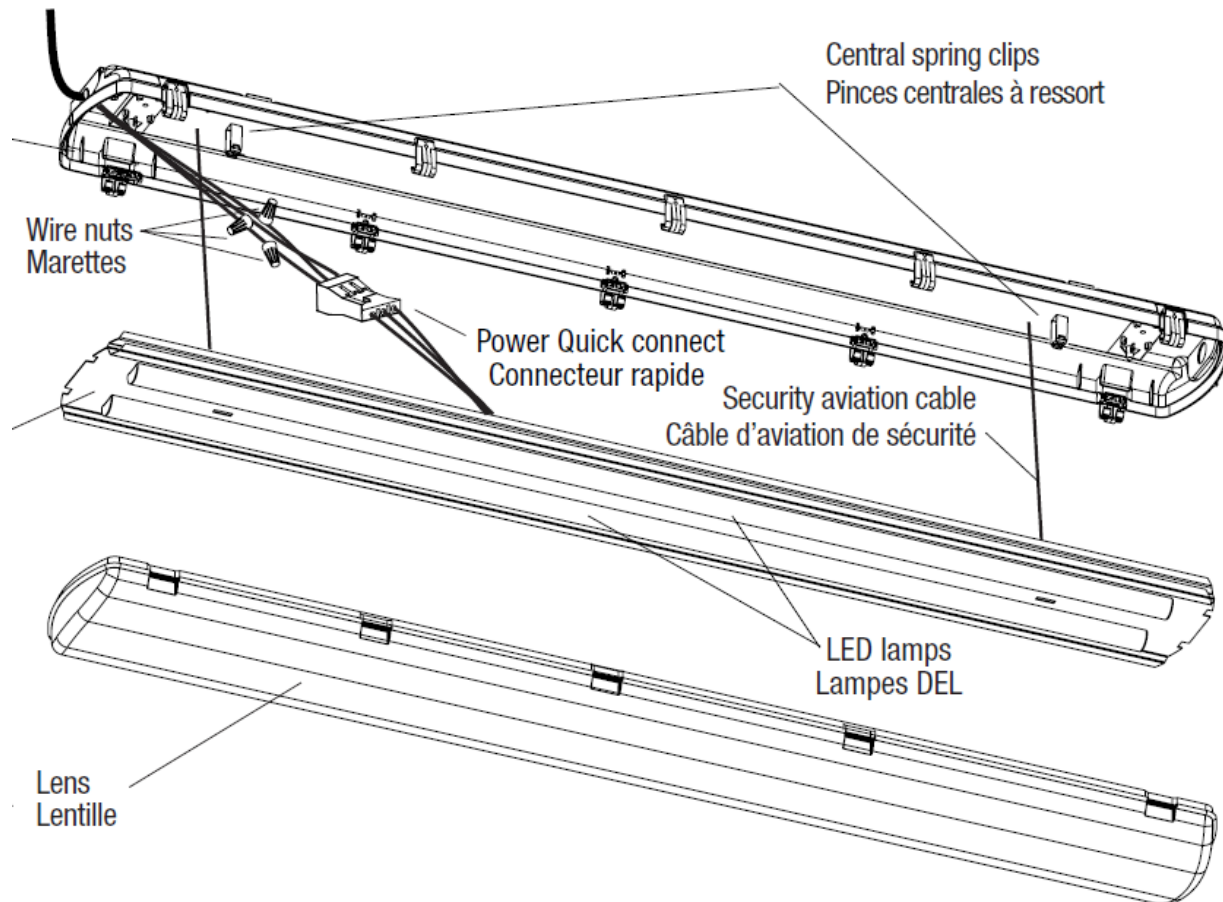

- 1- Turn the power off
- 2- Remove the lens (disengage the ten clips that hold the lens onto the luminaire housing)
- 3- Detach the existing pan from the housing by pressing the two central spring clips.
- 4- Disconnect the driver's wires:
 - a. Driver Black wire from the red wire coming from the sensor.
 - b. Driver white wire from the white wires.
 - c. Driver purple wire from the purple wire coming from the sensor.
 - d. Driver Grey wire from the Grey wire coming from the sensor.
 - e. Disconnect the ground wire
- 5- Detach the safety cables
- 6- Remove the existing pan kit

- 7- Prepare the new pan kit
- 8- Hang it by using the aviation casafety cable
- 9- Do connection from driver to existing wires from sensor:
 - a. Connect the ground wire from pan to the supply ground wire
 - b. Driver Black wire to the red wire coming from the sensor.
 - c. Driver white wire to the white wires.
 - d. Driver purple wire to the purple wire coming from the sensor.
 - e. Driver Grey wire to the Grey wire coming from the sensor.
- 10- Arrange the wiring and route them well in order to avoid jamming wires behind the pan
- 11- Clip the pan to install it in the housing by mean central spring clips
- 12- Close the lens and secure it by mean the 10 latches.
- 13- Turn on the lights

